


Please refer to the Attendant's Guide for more information.

Display

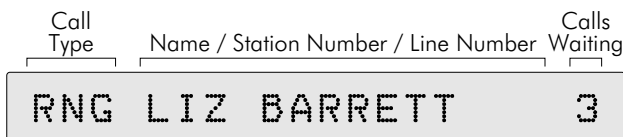

Operation

Buttons/Action

Call Answering

ANSWER to answer the call shown in the display.

Line to answer a ringing line not shown in the display.

Pick Up, DSS to answer a ringing station call not shown in the display.

Call Release

RELEASE to disconnect (hang up).

Transferring Calls

unscreened

DSS, CONNECT.

screened

DSS, DSS again after "DIL" displayed.

Ask called party. To complete transfer: **RELEASE.**

To abort: **TRANSFER**, wait for calling party, **TRANSFER.**

manual

TRANSFER, dial tone, dial station with dial pad.

Ask called party. To complete transfer: **RELEASE.**

To abort: **TRANSFER**, wait for calling party, **TRANSFER.**

Call Hold

HOLD. Or, answer or place another call.

Message Waiting*

MESSAGE, DSS to turn lights on/off, **MESSAGE.**

Outside Calls

Line, dial the number.

Station Calls

DSS. Or **Line**, dial the number.

Night Service*

NIGHT to activate/deactivate.

Checking Ring Delays

RING DELAY *twice*, **DSS/Line(s), RING DELAY** to exit.

Setting Ring Delays

RING DELAY, number of rings with dial pad,

DSS/Line(s), RING DELAY to exit.

Ringer Volume

VOL, console will beep with new setting.

Setting the Clock

HOLD, TRANSFER, RELEASE, dial pad "T" (8), enter time with dial pad.


Canceling Dialing

TRANSFER.

*optional

Please refer to the Attendant's Guide for more information.

Display

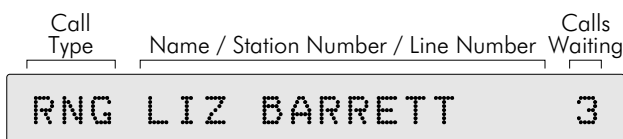

Operation

Buttons/Action

Call Answering

ANSWER to answer the call shown in the display.

Line to answer a ringing line not shown in the display.

Pick Up, DSS to answer a ringing station call not shown in the display.

Call Release

RELEASE to disconnect (hang up).

Transferring Calls

unscreened

DSS, wait for ringback, **RELEASE**.

screened

DSS. Ask called party. To complete transfer: **RELEASE**.
To abort: **TRANSFER**, wait for calling party, **TRANSFER**.

manual

TRANSFER, dial tone, dial station with dial pad.
Ask called party. To complete transfer: **RELEASE**.
To abort: **TRANSFER**, wait for calling party, **TRANSFER**.

Call Hold

HOLD. Or, answer or place another call.

Message Waiting*

MESSAGE, DSS to turn lights on/off, **MESSAGE**.

Outside Calls

Line, dial the number.

Station Calls

DSS. Or **Line**, dial the number.

Checking Ring Delays

RING DELAY *twice*, **DSS/Line(s)**, **RING DELAY** to exit.

Setting Ring Delays

RING DELAY, number of rings with dial pad,
DSS/Line(s), **RING DELAY** to exit.

Ringer Volume

VOL, console will beep with new setting.

Setting the Clock

HOLD, TRANSFER, RELEASE, dial pad "T" (8),
enter time with dial pad.

Canceling Dialing

TRANSFER.

*optional